


MODEL TIM-315-1A

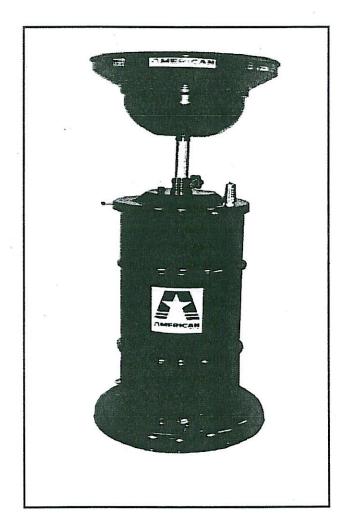


WASTE OIL DRAINS INSTRUCTION MANUAL

PRE ASSEMBLY

A. DRUM COVER ASSEMBLY

- 1.) Apply the Foam Seal (TIM-315-3) to the inner rim of the Drum Cover. (See Diagram 2)
- Screw the Cover Screws (TIM-315-010) to the Cover. 2.)
- Align Tube Guide (TIM-315-007) with the holes on top of 3.) the cover.
- Apply Seal to inner rim of the Drum Cover as shown Place Seal (TIM-315-019) between Cup (TIM-315-018) 4.) and bottom of drum cover. Align holes with those on drum cover and secure with Pan Head Screws (TIM-315-020) so that tube guide and cup are secured to drum cover.

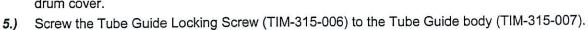

- Tighten Pipe Connector (TIM-315-015) to threaded end of PVC Tube (TIM-315-017). 6.)
- Thread Bushing (TIM-315-016) to Pipe Connector (TIM-315-015). 7.)
- Insert connector through hole of the drum cover from bottom and screw Quick Disconnect Coupler 8.) (TIM-315-014) to connector from top of cover. Tighten securely.
- Insert the Dip Stick (TIM-315-012) in slot with rubber grommet from top of cover. 9.)

B. DRAIN FUNNEL ASSEMBLY


- Insert the Drain Bowl's (TIM-315-BOWL) bottom pipe into the Drain Tube (TIM-315-005). 1.)
- Tighten the Pipe Screw (TIM-315-004) 2.)
- Insert the Drain Tube (TIM-315-005) into the opening at the top of the 3.) Tube Guide (TIM-315-007)
- Place the Filtered Funnel (TIM-FUNNEL) into the Drain Bowl.
- Insert the Pipe Cotter through botom hole of the tube. Bend to tips. (See Diagram 3)


C. DRUM ASSEMBLY


- Place the Drum onto the Drum Dolly (TIM-315-024).
- Securely tighten the Brackets (TIM-315-023) with the Locking Screws. as shown on Pre-Assembly page for the type of drum used.
- Place the Pre-Assambled cover onto the drum and secure with the Cover Screws (TIM-315-010).


OPERATION

- Place drain under crankcase of the vehicle. 1.)
- To raise or lower the height of the Drain Bowl (TIM-315-BOWL), grasp the Drain Tube (TIM-315-005) with one hand while unscrewing the Locking Screw (TIM-315-006) with the other hand.
- Move the funnel to the desired height. 3.)
- 4.) Retighten the Locking Screw (TIM-315-006).
- 5.) Drain the vehicle's waste oil into the drain bowl.
- 6.) Unscrew the Locking Screw (TIM-315-006) and lower the funnel when the draining is complete.

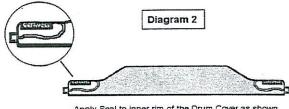

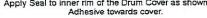

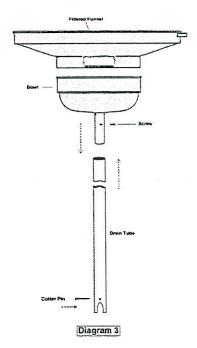

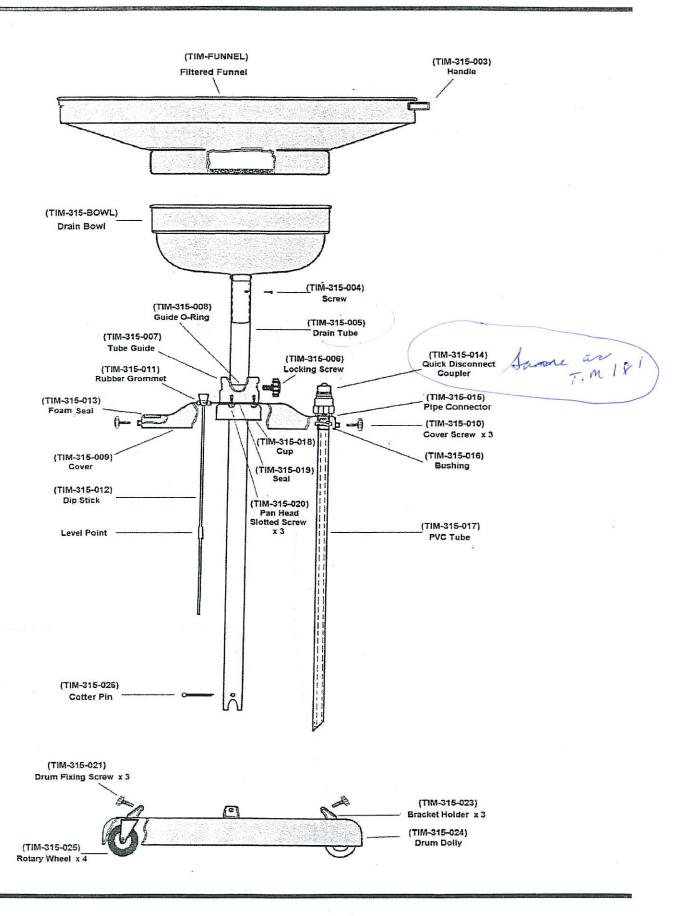

LUBRICATION EQUIPMENT CORPORATION®

