

ASCOT SUPPLY

Safety Pin Style

22-Ton Jack Stands



Model No.	Capacity	Base Size	Min. Height	Max Height
302-63220	22 Ton	9-7/8" x 9-7/8"	13-3/8"	19-5/8"



This is the safety notification symbol. This symbol will notify you of any potential injury hazards. Please follow all instructions that follow this symbol to avoid possible injuries or death.

WARNING

Indicates a hazardous situation. If proper steps are not followed, death or serious injury could result.

MAKE SURE TO READ AND FULLY UNDERSTAND THE INSTRUCTION MANUAL BEFORE USING THIS PRODUCT





IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE

Before using these jack stands, be sure to read all content within this manual, ensuring that you understand the operating procedures, maintenance requirements and all safety warnings.

The owner and/or operator shall have an understanding of the product, its operating characteristics, and safety operating instructions before operating this device. Safety information shall be emphasized and understood. If the operator is not fluent in English, the product and safety instructions shall be read to and discussed with the operator in the operator's native language by the purchaser/owner or his designee, making sure that the operator comprehends their contents.



WARNING ACTIONS TO HELP PREVENT DANGEROUS SITUATIONS

- Study, understand and follow all instructions before operating this device.
- Maximum load capacity per matched pair shall not exceed the rated capacity of the individual stand.
- Use only on hard, level surfaces.
- No alterations shall be made to this product.
- Stands are not to be used to simultaneously support both ends of a vehicle.
- Use as a matched pair only
- Use stands to support one end of a vehicle only.
- Center load on saddle.
- Failure to heed these warnings may result in serious personal injury and/or property damage.



INSPECTION

- This device shall be inspected immediately if the device is believed to have been subjected to an abnormal load or shock. It is recommended that this inspection be made by a manufacturer's or supplier's authorized repair facility.
- Owners and/or operators should be aware that repair of this equipment may require specialized knowledge and facilities. It is recommended that an annual inspection of the product be made by a manufacturer's or supplier's authorized repair facility and that any defective parts, decals, or safety labels or signs be replaced with manufacturer's or supplier's specified parts.



DAMAGED EQUIPMENT AND ADD-ONS

Any jack stand that appears to be damaged, is found to be worn or operates abnormally in any way will be removed from service and destroyed immediately.

Alterations

Because of potential hazards associated with this type of equipment, no alterations shall be made to the product.

Attachments and Adapters

Only attachments and/or adapters supplied by the manufacturer shall be used.

SETUP

- Prior to each use, visual inspection (See Pg.2) shall be made to the device by checking for abnormal conditions, such as cracked welds, damaged, loose or missing parts.
- Consult the vehicle owner's manual to determine the location of support points.
- Be sure to set the vehicle in park with the emergency brake on and wheels securely chocked.
- Be sure that the vehicle and the jack stands are on a hard, level surface.

ASSEMBLY

- Insert extension column into base collar.

OPERATION

Supporting a Load

- Properly chock the vehicle wheels.
- Lift the extension column up to desired position, insert support rod through the column adjustment holes. Ensure the support rod is properly and fully engaged in the column holes and securely rested on the collar.
- Slowly and carefully lower the vehicle onto the saddle. Be sure the load is centered on the saddle.
- Ensure vehicle is secure and stable before working on, around or under.

Lowering Load


- Using a suitable jack, lift vehicle clear of stands.
- Disengage support pin from the extension column holes and carefully lower the column down to the lowest position. Place support pin into holder.
- Remove stands. Follow procedures of jack operation to lower vehicle.

MAINTENANCE

Inspect each stand before use. Ensure all parts move freely. If rust appears, sand away the rust area and cover with appropriate utility paint.

Part No.	Description	QTY
ZJ22-100	Extension Column Support Rod	1

*Items not identified by part number are not available for replacement

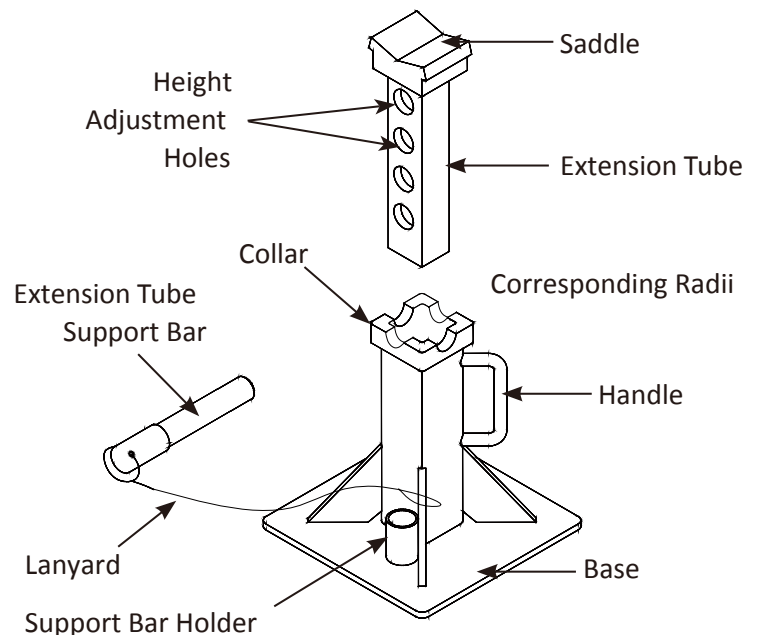

ONE YEAR LIMITED WARRANTY

For a period of one (1) year from your purchase date, Ascot Supply will repair or replace (at its option) without charge, your Ascot Supply product if it was purchased new and the product has failed due to a defect in material or workmanship which you experienced during normal use of the product. This limited warranty is your exclusive remedy.

You may be advised to return the product under warranty, freight prepaid, to the Ascot Supply service department.

If this Ascot Supply product is altered, abused, misused, modified or undergoes service by an unauthorized technician, your warranty will be void. We are not responsible for damage to ornamental designs you place on this Ascot Supply product and such ornamentation should not cover any warnings or instructions or they may void the warranty. This warranty does not cover scratches, superficial dents and other abrasions to the paint finish that occur under normal use.

Subject to the law in your state:

- (1) Your sole and exclusive remedy is repair or replacement of the defective product as described above.
- (2) Ascot Supply is not liable for any incidental damages, including but not limited to, lost profits and unforeseeable consequences.
- (3) The repair and replacement of this product under the express limited warranty described above is your exclusive remedy and is provided in lieu of all other warranties, express or implied. All other warranties, including implied warranties and warranties of merchantability or fitness for a particular purpose are disclaimed and, if disclaimer is prohibited, these warranties are limited to one year from your date of purchase of this product.

Some states' laws do not allow limited durations on certain implied warranties and some states' laws do not allow limitations on incidental or consequential damages. You should consult the law in your state to determine how your rights may vary.